ALPHA LINER INSTALLATION INSTRUCTIONS

A. DO NOT open lid until tank is cool!

B. Make sure tank is clean! Remove baked-on paint with paint remover or heat empty tank and use putty knife or scraper to loosen and remove residue.

C. Open bag and push it well down to the bottom of the tank.

D. Install bag snap-ring or basket. MAKE SURE TOP OF BAG IS BELOW DISCHARGE HOLE.

THINGS TO REMEMBER

1. (Air Cooled Models) Clean condenser cooling fins with compressed air, frequently.

2. Check discharge hose to make sure it is not clogged or kinked. With recycler cold and lid open, blow air through hose and condenser.

3. Never replace hose with a different material, e.g. rubber. It could swell and restrict flow.

4. Do not allow hose to extend into clean recovered solvent.

5. Make sure recovery bucket or tank is vented.

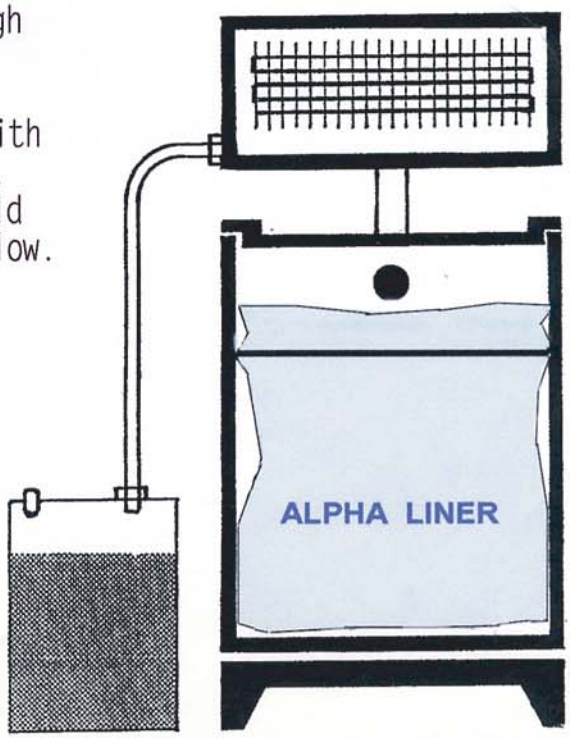

6. NEVER recycle solvents containing nitrocellulose lacquer. It will auto-ignite in your recycler.

7. (Oil Heated Models) Check oil level frequently. Change oil if dirty.

8. Lid Gasket and sealing surface should always be kept clean and free of paint.

9. NEVER operate recycler without a bag basket or retainer ring.

10. Do NOT overfill recycler. Go by the manufacturer's recommended quantities. (Head space is needed to allow for expansion of heated waste solvents.)